




PORTABLE PARTITIONS

— AUSTRALIA —

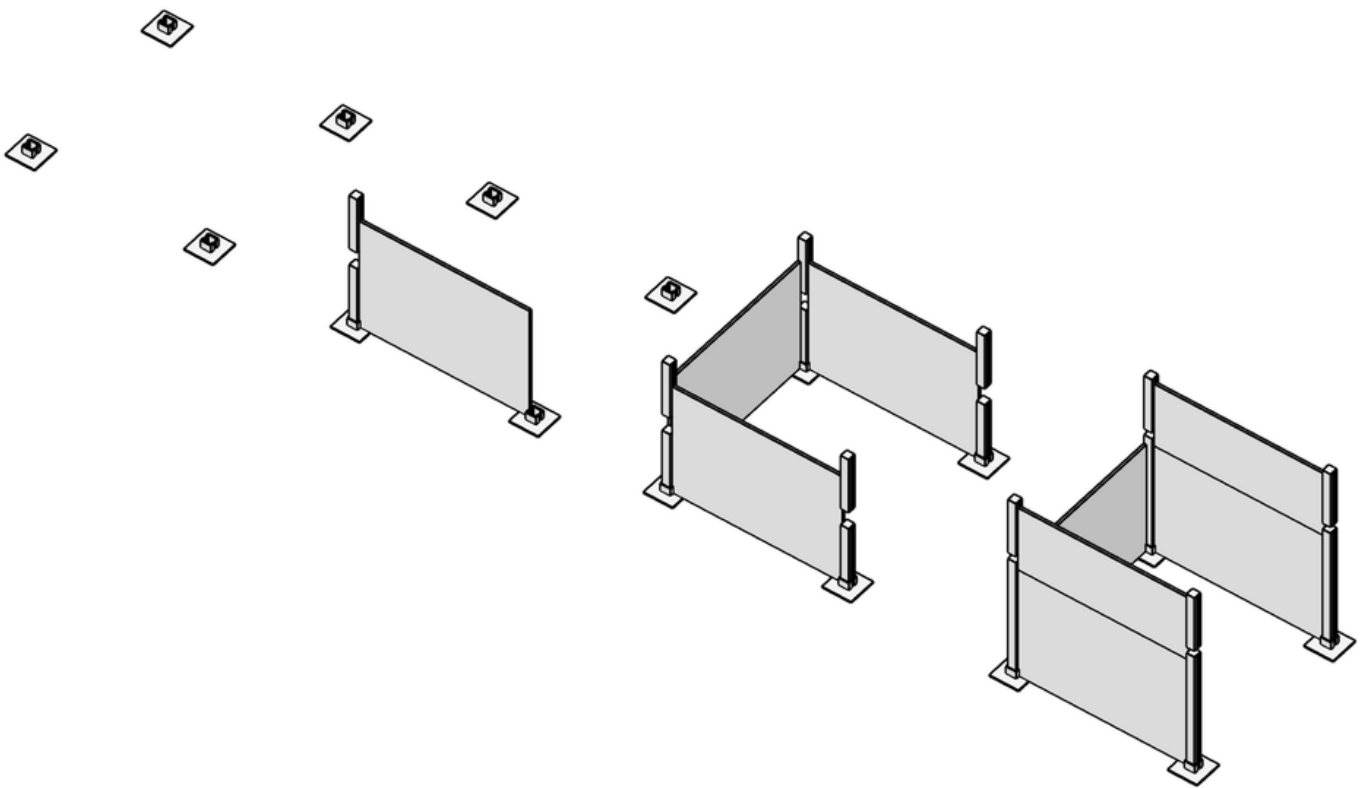

SCAN FOR VIDEO




**Modular Office Cubicle
System Assembly Guide**

Step by step




Step 1

Arrange the feet into position

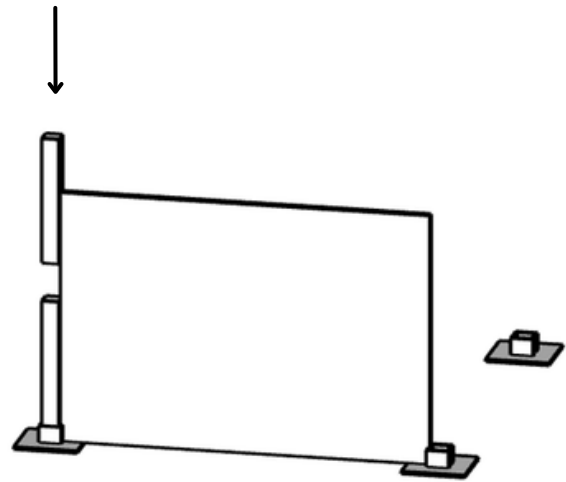


Step 2

Place the panel between the feet, and slide the posts through the panel and into the feet.

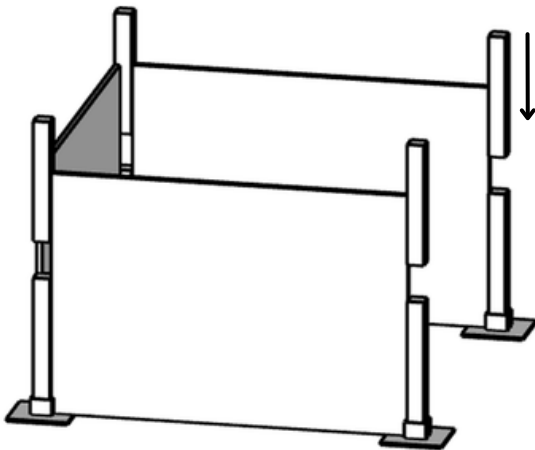

Step 3

Repeat for each additional panel

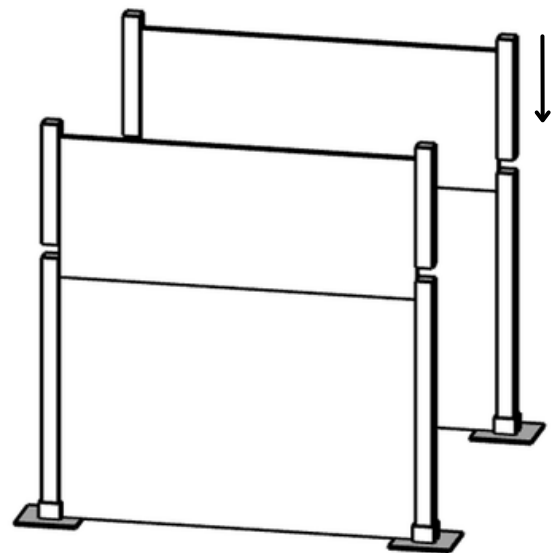

Step 4

If you have upper panels or windows slide them through the posts into position and then finish putting the upper posts


Components for some configurations

1.83 x 1.83m Panels


1.83m height Post and Foot




+

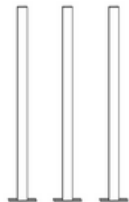


=

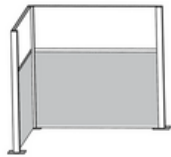


+

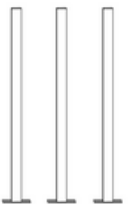


=

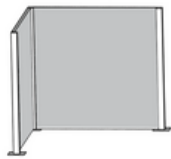


+

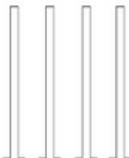


=

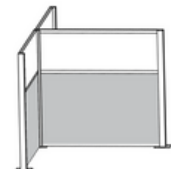


+

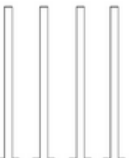


=

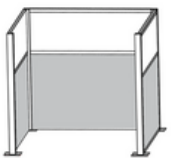

+

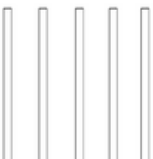


=

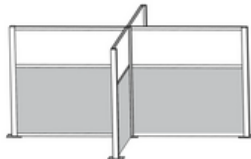


+




=

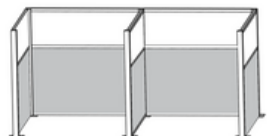


+

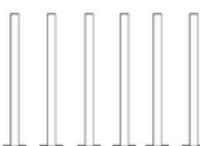

=

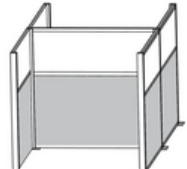


Panel dimension options

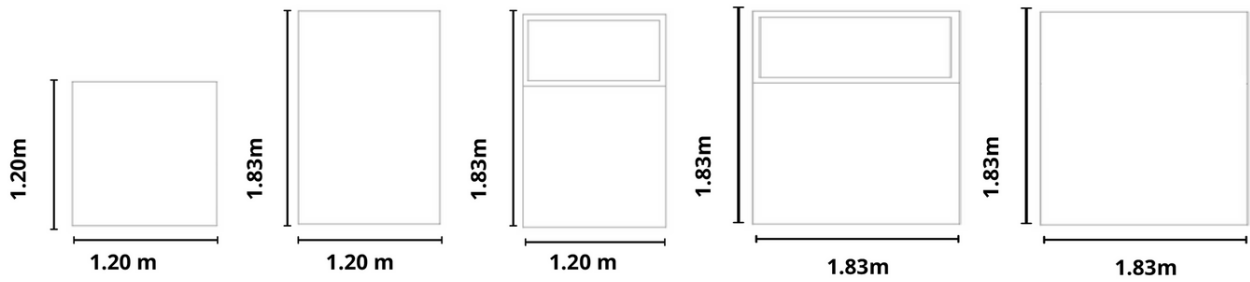


Popular configurations


L Shape

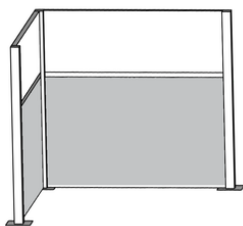


T Shape

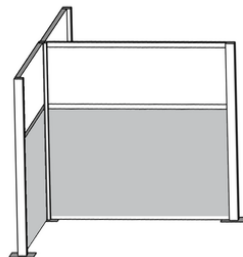


+ Shape

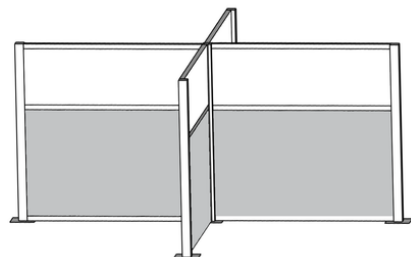

U Shape

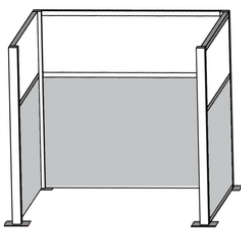

W Shape

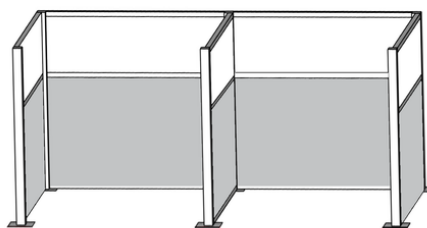

H Shape

